



SILICONE INSTALLATION INSTRUCTIONS

See other installation options using Instant Adhesive and VHB Tape

ONLY USE: GE “Silicone rubber sealant” (I) or (II) or (II W/D Supreme - 2X Stretch)
Do not use Liquid Nails, DAP, LePage PL, Polyseamseal
Boing product warranty is voided if non-approved adhesive is used.

Tools/Equipment: Caulking Gun (300 ml) + Cleaning Rag + Solvent

Only use GE Silicone I or II or 2X

1. Double check measurements to ensure the correct number of **Boing** pieces to do the job
2. Ensure that non-porous surfaces are clean and dry (painted or unpainted)
 - ★ Sheetrock/Drywall/Gyprock /Concrete block/Ceramic tile/Metal/Wood etc
 - ★ Seal/Waterproof moist/damp areas (see Waterseal info)
3. Cutting to Size
 - all **non-aluminum Boing** products can be cut to size with a very sharp, thin blade knife.
 - Option : If you want a custom fit with no exposed foam:
 - measure the total space to be covered
 - cut out a piece from the center of the **Boing** pad equal to the excess length
 - re-connect the 2 remaining sections



4. Apply silicone to the back side of the **wall pad, corner strip, jumbo guard**
 - start with a bead around the outer edge
 - keep the perimeter bead about **1/4" from the edge**
 - add more silicone in a **Zig Zag** pattern
5. Attach to surface after applying silicone:
 - immediately place the strip or corner or wall pad in the location you desire
 - make any last minute positioning adjustments
 - press a little harder all over the panel/strip to ensure a good bond
 - for panel, press 30-60 seconds, corner strip or corner guard, press 20-30 seconds
5. Best to “seal” any exposed foam with a thin film of silicone adhesive
6. Add a small “bead” of silicone around the outer edges to limit attempts to peel off.
 - clean off any excess silicone - see Silicone Removal on website FAQ’s
7. Do not touch for at least 12 hours (24 hours to fully cure)




Buy at Home Depot/Lowes/ACE, etc)

USE ONLY “FRESH” PRODUCT
Do not use after “Use By” date

Silicone Adhesive Safety:
Read safety instructions on tube

One tube of silicone* is good for:
2-3 Wall Pads
6-8 Corner Strips
12-14 Jumbo Corner Guards
2 Sets Post Pads

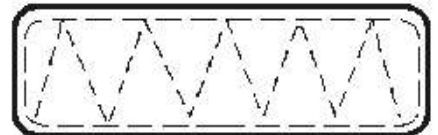

WET AREAS

- ★ moisture will affect the adhesive
- ★ make sure all areas are clean/dry
- ★ seal/waterproof all surfaces
- ★ ensure bead of sealant around edge



DAILY/WEEKLY CLEANING & MAINTENANCE:

Use any general household cleaner + soft cloth

Do not use harsh abrasive scrubbing agents

Do not use strong chemicals like Citrus spray or Bleach

SILICONE REMOVAL - use DAP “Silicone-Be-Gone” (see DAP website for store locations)



* **The aluminum reinforced corner strips are generally attached with screws (provided)**